

## LaSpaziale S1 Vivaldi II Feature Configuration Guide

Feature	Starting State (ON/STBY)	Key Press	How Long? (Seconds)	How to know when in correct state to configure feature?	Next Button Press	Next Button Press	Exit Strategy
Set Volumetric Dosing for Single Cup	ON	ON/OFF	3	ON/STBY and current set temp lamps blinking	Single Cup Button	Single Cup again when desired amount of water is dispensed	Momentarily Press ON/OFF to exit and save setting
Set Volumetric Dosing for Double Cup					Double Cup Button	Double Cup again when desired amount of water is dispensed	
Set Main Temp					Hot Water	Press and release Hot Water Button until desired temp lamp is On	
Programmable Preinfusion					Hold BOILER button for 3sec. (Displays current setting)	Each subsequent press of BOILER lights one more lamp. No lamps on = 0 sec preinfusion. All eight on = 8 sec preinfusion. When all 8 lamps are lit, one more BOILER press cycles back to 0 sec preinfusion.	
Economy Mode ON/OFF	ON	BOILER	10	ECON Lamp switches state	Note: Remains in current ECON state until this step is repeated even through STBY/On transitions and Power Fail conditions		
Boiler ON/OFF			Momentary	BOILER Lamp switches state	Note: Boiler off state is not "remembered" through STBY/ON transitions or Power Fail conditions. Boiler always returns to On.		
Standard Temp Offset	STBY	BOILER	10	On/STBY and BOILER lamps blinking	BOILER	Each press of Boiler lights one more lamp. No lamps on = 0C offset. All eight on = -8C offset. When all 8 lamps are lit, 1 more BOILER press cycles back to 0C offset	Momentarily Press ON/OFF to exit and save setting
Enhanced Temp Offset					Double Cup or Single Cup	Double Cup decreases offset by 1C for each press up to -8C. Single Cup increases offset by 1C up to +8C	
V1/VII Mode Change	STBY	HOT WATER	3	3 Yellow Lamps Blink = VII mode 3 Green Lamps Blink = VI mode <b>Warning: If you change modes and later switch to back to original mode, all configuration changes for that mode are lost. If you want to know what mode you are in without losing your current configuration, unplug V2 , then plug back in. Mode lamps blink once when plugged in.</b>			